

 



 

 

 

 



 





 



 









 
























Original	Replacement
 Power	 Power
 Disc Menu	 D.Menu / Top
 Info/Display	 Info / Angle
 Home	 Menu / Home
 Sleep	 Sleep / Timer
 Radio/Input	 TV/Radio /
 Open/Close	 Eject / Surround
 Up/Preset+	 Up
 Down/Preset-	 Down
 Right/Tuning+	 Right
 Left/Tuning-	 Left
 Enter	 OK
 Return	 Back / Return
 Marker	 Fav / Marker / PC
 Play/Mono/Stereo	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Vol+	 Vol+
 Vol-	 Vol-
 Sound Effect	 Audio / Lang I/II
 Optical	 Subtitle / EQ
 Speaker Level	 Setup / OPT /
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Clear	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 *	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3



