


Original		Replacement	
	Power		Power
	Source Search		Source
	Computer		Comp / Video
	Video	+	Shift + Blank / Mute
	USB		Mode
	Lan	+	Shift + Left
	Screen Fit	+	Shift + Enter
	1	+	Shift + Mode
	2	+	Shift ++ / Play
	2D/3D	+	Shift + Down
	3		Volt / Focus
	4	+	Shift + Auto
	5	+	Shift +- Stop
	6	+	Shift + Help /
	7		Eco / Aspect
	Auto		Auto
	Aspect	+	Shift + Menu

Original		Replacement	
	8		3D / Invert
	Color Mode		+ Shift + Source
	9		+ Shift + 3D /
	0		+ Shift + Comp / Video
	Menu		Menu
	Esc		+ Shift + Power
	User		+ Shift + Up
	Pointer		+ Shift + Right
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		Enter
	Page+		+ Shift + Vol + / Page +
	Page-		+ Shift + Vol - / Page -
	E-Zoom+		+ / Play
	E-Zoom-		- / Stop

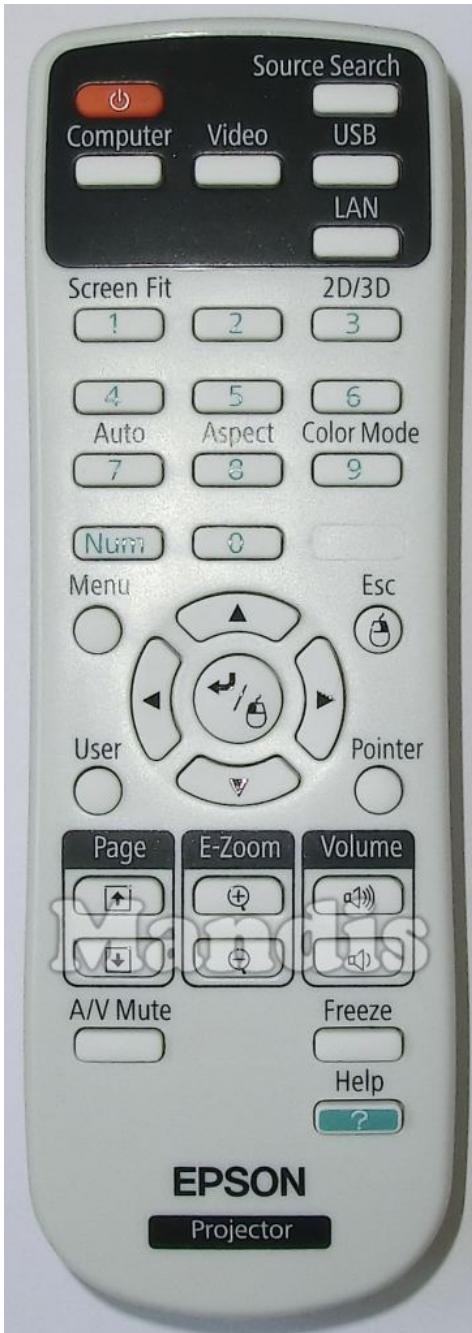



Original	Replacement
Volume 	Vol+
	Vol-
A/V Mute 	AV Mute
Freeze 	Freeze
Help 	?/Help
	Page▲  Vol
	Page▼  vol
	Mute Blank
	Timer  Freeze
	Info  Help
	Blank / Mute
	Freeze / Timer
	Help / Info

