







 



 






 
 







 

























 





 











Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit / Cancel / Clear
 1	 1	 Menu	 Menu / Home
 2	 2	 EPG	 Guide / EPG / -/--
 3	 3	 ALT	 Display / Media
 4	 4	 SUB	 Subtitle / EQ
 5	 5	 Browse	 AV / Input / RDS
 6	 6	 Freeze	 Pause / Step / Freeze
 7	 7	 Up/CH+	 Up
 8	 8	 Down/CH-	 Down
 9	 9	 Vol-	 Vol-
 0	 0	 Left	 Left
 Text	 Text / Goto	 Vol+	 Vol+
 [i]	 Info / Angle	 Right	 Right
 Tv/Rad	 TV/Radio /	 OK	 OK
 TV	 Smart / List	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		

