







 









 
 

















Original	Replacement
	 Power
	 Source
	 [=]
	 I-II
	 [...]
	 Red
	 Green
	 Yellow
	 Blue
	 Menu
	 EPG
	 Up
	 <<
	 Play
	 Pause
	 >>
	 Down

Original	Replacement
	 Option
	 [i+]
	 Vol+
	 Stop
	 Page+
	 Vol-
	 Mute
	 Page-
	 1
	 2
	 3
	 FAV
	 4
	 5
	 6
	 J/Slideshow
	 7





Original	Replacement	Original	Replacement
8	8	8	8
9	9	9	9
ROTATE	Rotate	MEDIA DISPLAY	Display / Media
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
0	0	HDMI - BAT 0	0
[<>]	[<>]	FORMAT PICTURE	Picture / Format
ZOOM	Zoom	SIZE ZOOM	Zoom / Size

Original	Replacement

