









 

 

 






 

 




Original		Replacement		Original		Replacement	
	Power		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		CH-		CH- / Page-
	1		1		≡		D.Menu / Top
	2		2		Input		AV / Input / RDS
	3		3		Smart Colors		Display / Media
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		OK
	9		9		Back		Back / Return
	0		0		Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/-		Red		Red / Netflix / Search
	Rec		Rec / Rec Mode		Home		Menu / Home
	Info		Info / Angle		Green		Green / APP / Repeat
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Original	Replacement	Original	Replacement
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II
	TXT		Text / Goto
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /

Original	Replacement

