









 





 





 



























 















 





Original	Replacement
	
Power	Power
	
Media Player	Display / Media
	
Input Tv	TV/Radio /
	
Input AV	AV / Input / RDS
	
Menu	Menu / Home
	
Text	Text / Goto
	
STTL	Subtitle / EQ
	
Guide	Guide / EPG / -/-
	
i	Info / Angle
	
Exit	Exit / Cancel / Clear
	
Option	Setup / OPT /
	
Back/Return	Back / Return
	
Up	Up
	
Down	Down
	
Left	Left
	
Right	Right
	
OK	OK

Original	Replacement
	
Red	Red / Netflix / Search
	
Green	Green / APP / Repeat
	
Yellow	Yellow / YouTube / Repeat
	
Blue	Blue / Prime Video / Random
	
Aspect	Picture / Format
	
Mute	Mute / Dimmer
	
Vol+	Vol+
	
Vol-	Vol-
	
CH+	CH+ / Page+
	
CH-	CH- / Page-
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7





	Original	Replacement		Original	Replacement
	8		8		
	9		9		
	0		0		
	Still		Pause / Step / Freeze		
	Last View		Fav / Marker / PC		

