

 

 



 







 













 















 




Original	Replacement
	 Power
	 Shift + Power
	 Smart / List
	 Display / Media
	 Info / Angle
	 Up
	 Down
	 Left
	 Right
	 OK
	 Shift + Zoom /
	 Picture / Format
	 Sound / Title
	 Setup / OPT /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat









 








 









Original	Replacement
	 Fav / Marker / PC
	 AV / Input / RDS
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Vol+
	 Vol-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0







Original	Replacement	Original	Replacement
On	 Power	CH-	 CH- / Page-
N	 Smart / List	Vol+	 Vol+
R	 Display / Media	Vol-	 Vol-
[ + ]	 Info / Angle	1	 1
Off	 +  Shift + Power	2	 2
■	 OK	3	 3
Up	 Up	4	 4
Down	 Down	5	 5
Right	 Right	6	 6
Left	 Left	7	 7
Input 1	 Red / Netflix / Search	8	 8
Input 2	 Green / APP / Repeat	9	 9
Input 3	 Yellow / YouTube / Repeat	0	 0
PC	 Fav / Marker / PC	[ ]/Picture	 Picture / Format
Input	 AV / Input / RDS	J/Sound	 Sound / Title
Mute	 Mute / Dimmer	Set Up	 Setup / OPT /
CH+	 CH+ / Page+	Pos Size	 Text / Goto

Original	Replacement	Original	Replacement
On	 Power	CH-	 CH- / Page-
N	 Smart / List	Vol+	 Vol+
R	 Display / Media	Vol-	 Vol-
[ + ]	 Info / Angle	1	 1
Off	 +  Shift + Power	2	 2
■	 OK	3	 3
Up	 Up	4	 4
Down	 Down	5	 5
Right	 Right	6	 6
Left	 Left	7	 7
Input 1	 Red / Netflix / Search	8	 8
Input 2	 Green / APP / Repeat	9	 9
Input 3	 Yellow / YouTube / Repeat	0	 0
PC	 Fav / Marker / PC	[ ]/Picture	 Picture / Format
Input	 AV / Input / RDS	J/Sound	 Sound / Title
Mute	 Mute / Dimmer	Set Up	 Setup / OPT /
CH+	 CH+ / Page+	Pos Size	 Text / Goto



