





 


 
 











 










 




 


 















 
 

 











Original		Replacement		Original		Replacement	
	Power On		Power		I<<		I<< / Preset-
	Power Off		Shift + Power		Play		Play / Slow
	Computer 1		Red / Netflix / Search		Pause		Pause / Step / Freeze
	Video		Shift + 4		>>I		>>I / Preset+
	HDMI		Shift + 0		<<		<< / Tune-
	Computer 2		Blue / Prime Video / Random		Stop		Stop / Hold
	S-Video		Picture / Format		>>		>> / Tune+
	Network		Smart / List		Zoom+/1		1
	Menu/Exit		Menu / Home		Page+/2		2
	Up / Keystone Up		Up		Mic/Vol+/3		3
	Auto		Info / Angle		Zoom-/4		4
	Left/Vol-		Left		Page-/5		5
	Mode Enter		OK		Mic/vol-/6		6
	Right/Vol+		Right		Freeze/7		7
	Eco Blank		Back / Return		Aspect/8		8
	Down/Keystone		Down		9		9
	Source		AV / Input / RDS		Mute		Mute / Dimmer



