


























 



 



 



 
































Original		Replacement		Original		Replacement	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2



 



 








 
 

 












 













 


























	Original	Replacement		Original	Replacement
	3		3		Left / Vol-
	4		4		Down / CH-
	5		5		Down / CH-
	6		6		Rec
	7		7		Stop
	8		8		Pause
	9		9		Play
	VPT		Guide / EPG / -/--		Open / Close
	0		0		<< / Tune-
	AV		AV / Input / RDS		>> / Tune+
	i		Info / Angle		Index
	Up / CH+		Up		Index Mark
	Up / CH+		CH+ / Page+		Index Erase
	Right / Vol+		Right		Traking
	Right / Vol+		Vol+		
	OK		OK		
	Left / Vol-		Vol-		

	Original	Replacement		Original	Replacement
	Left / Vol-		Left		Down
	Down / CH-		Down		Down / CH-
	Down / CH-		CH- / Page-		Rec / Rec Mode
	Rec		Rec / Rec Mode		Stop / Hold
	Stop		Stop / Hold		Pause / Step / Freeze
	Pause		Pause / Step / Freeze		Play / Slow
	Play		Play / Slow		Eject / Surround
	Open / Close		Eject / Surround		<< / Tune-
	<< / Tune-		<< / Tune-		>> / Tune+
	>> / Tune+		>> / Tune+		Index
	Index		Red / Netflix / Search		Index Mark
	Index Mark		Green / APP / Repeat		Index Erase
	Index Erase		Yellow / YouTube / Repeat		Traking
	Traking		Blue / Prime Video / Random		







Original		Replacement		Original		Replacement	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2





Original		Replacement		Original		Replacement	
	3		3		Left / Vol-		Vol-
	4		4		Down / CH-		Down
	5		5		Down / CH-		CH- / Page-
	6		6		Rec		Rec / Rec Mode
	7		7		Stop		Stop / Hold
	8		8		Pause		Pause / Step / Freeze
	9		9		Play		Play / Slow
	VPT		Guide / EPG / -/-		Open / Close		Eject / Surround
	0		0		<<		<< / Tune-
	AV		AV / Input / RDS		>>		>> / Tune+
	i		Info / Angle		Index		Red / Netflix / Search
	Up / CH+		Up		Index Mark		Green / APP / Repeat
	Up / CH+		CH+ / Page+		Index Erase		Yellow / YouTube / Repeat
	Right / Vol+		Right		Tracking		Blue / Prime Video / Random
	Right / Vol+		Vol+				
	OK		OK				
	Left / Vol-		Left				





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV / Input / RDS
Up / CH+	Up
Up / CH+	CH+ / Page+
Right / Vol+	Right
Right / Vol+	Vol+
Left / Vol-	Left

Original	Replacement
Left / Vol-	Vol-
Down / CH-	Down
Down / CH-	CH- / Page-

