 



 

 

 

 

 

 

 









 

 

 
 




Original	Replacement	Original	Replacement
Power	Power	Timer Rec	Sleep / Timer
TV/Video	AV / Input / RDS	Slow	Shift + Play /
Counter Reset	Exit / Cancel / Clear	Pause	Pause / Step / Freeze
1	1	Play	Play / Slow
2	2	<<	<< / Tune-
3	3	>>	>> / Tune+
Prog +	CH+ / Page+	Stop	Stop / Hold
4	4	SP/LP	Sound / Title
5	5	A.Select	Audio / Lang I/II
6	6		
Prog -	CH- / Page-		
7	7		
8	8		
9	9		
Display	Display / Media		
0	0		
Rec	Rec / Rec Mode		





Original	Replacement	Original	Replacement
 Power	 Power		
 Source	 AV / Input / RDS		
 1	 1		
 2	 2		
 3	 3		
 PR+	 CH+ / Page+		
 4	 4		
 5	 5		
 6	 6		
 PR-	 CH- / Page-		
 7	 7		
 8	 8		
 9	 9		
 Vol+	 Vol+		
 0	 0		
 Vol-	 Vol-		

