


















































































 








Original	Replacement	Original	Replacement
 Power	 Power	 Up/CH+	 Up
 Mute	 Mute / Dimmer	 Left	 Left
 Red/EPG	 Red / Netflix / Search	 Vol-	 Vol-
 Red/EPG	 Guide / EPG / -/--	 OK	 OK
 Tv/Radio	 TV/Radio /	 Right	 Right
 Pause	 Pause / Step / Freeze	 Vol+	 Vol+
 Green/Audio	 Green / APP / Repeat	 Down/CH-	 Down
 Green/Audio	 Audio / Lang I/II	 Menu	 Menu / Home
 Info	 Info / Angle	 Exit	 Exit / Cancel / Clear
 Recall	 Back / Return	 A-Z	 Setup / OPT /
 Yellow/Pg	 Yellow / YouTube / Repeat	 SAT	 Shift + 0
 Yellow/Pg	 Sleep / Timer	 FAV	 Fav / Marker / PC
 Yellow/Pg	 Shift + CH+ /	 1	 1
 TXT	 Text / Goto	 2	 2
 Blue/PgDw/Forma	 Blue / Prime Video / Random	 3	 3
 Blue/PgDw/Forma	 Shift + CH- /	 4	 4
 Blue/PgDw/Forma	 Picture / Format	 5	 5

Original	Replacement	Original	Replacement
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 SMART	 CH PAGE
 VOL +	 MEDIA	 DISPLAY	 TV
 VOL -	 TAPE	 TUNER	 DVD
 1	 2	 3	 CD-STB
 4	 5	 6	 VIDEO
 7	 8	 9	 AUX-HDD
 8	 9	 0	 USB
 9	 0	 FAV MARKER	 BLUETOOTH
 GUIDE EPG	 NETFLIX	 APP	 YouTube
 NETFLIX	 REPEAT	 REPEAT A-B	 RANDOM
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM



