



Original	Replacement
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step / Step
	Exit / Cancel / Clear
	Guide / EPG / -/-
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Original	Replacement
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Shift + CH+ /
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





Original	Replacement	Original	Replacement
JKL 4	VIDEO 4		
MNO 5	TAPE 5		
PQR 6	TUNER 6		
STU 7	AUX - HDD 7		
VWX 8	USB 8		
YZ 9	BLUETOOTH 9		
FAV.	PC FAV MARKER		
0	HDMI - BAT 0		
P<P	RETURN BACK		
<<	TUNE- <<		
>>	TUNE+ >>		
TIMERS	TIMER SLEEP		
LIB.	TOP MENU D.MENU		
Play	SLOW Play		
Stop	HOLD Stop / Hold		
Pause	STEP - FREEZE Pause / Step / Freeze		
Rec	REC MODE Rec / Rec Mode		

