

 






Original	Replacement
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step /
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Original	Replacement
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Shift + CH+ /
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Fav.		Fav / Marker / PC				
	0		0				
	P<P		Back / Return				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Timers		Sleep / Timer				
	Lib.		D.Menu / Top				
	Play		Play / Slow				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				

