










 
 






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Info / Angle
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 >	 >> / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 <	 << / Preset-
 0	 0
 Mute	 Mute / Dimmer

Original	Replacement
 i/OSD	 Display / Media
 Z/Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat





Original	Replacement
	Play / Slow
	Yellow / YouTube / Repeat
	Pause / Step / Freeze
	Blue / Prime Video / Random
	Stop / Hold
	Sound / Title

Original	Replacement





Original	Replacement
Power	Power
1	1
2	2
3	3
Audio	Audio / Lang I/II
4	4
5	5
6	6
[<>]	Zoom / Size
>	>> / Preset+
7	7
8	8
9	9
?	Smart / List
<	<< / Preset-
0	0
i/OSD	Display / Media

Original	Replacement
Disc Menu	D.Menu / Top
Disc Menu	Menu / Home
Up	Up
P+	CH+ / Page+
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
TXT	Text / Goto
<<	<< / Tune-
Down	Down
P-	CH- / Page-
TV-G	Guide / EPG / -/-
>>	>> / Tune+
Red/Picture	Picture / Format
Red/Picture	Red / Netflix / Search





Original	Replacement	Original	Replacement
	Sleep / Timer		
	Play / Slow		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Pause / Step / Freeze		
	Sound / Title		
	Stop / Hold		
	Blue / Prime Video / Random		

Original	Replacement





Original	Replacement	Original	Replacement
Power	Power	i/OSD	Display / Media
1	1	Z/Disc Menu	Menu / Home
2	2	Up	Up
3	3	P+	CH+ / Page+
Audio	Audio / Lang I/II	Left	Left
4	4	Vol-	Vol-
5	5	OK	OK
6	6	Right	Right
[<>]	Zoom / Size	Vol+	Vol+
>	>> / Preset+	TXT	Text / Goto
7	7	<<	<< / Tune-
8	8	Down	Down
9	9	P-	CH- / Page-
?	Smart / List	TV-G	Guide / EPG / -/-
<	<< / Preset-	>>	>> / Tune+
0	0	Red/Image/I>	Red / Netflix / Search
Mute	Mute / Dimmer	Red/Image/I>	Shift + Play / Slow





Original	Replacement	Original	Replacement
	Green / APP / Repeat		
	Play / Slow		
	Sleep / Timer		
	Pause / Step / Freeze		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Stop / Hold		
	Sound / Title		



















Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP/Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 [<>]	 Zoom / Size
 >	 >> / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 <	 << / Preset-
 0	 0
 i/OSD	 Display / Media

Original	Replacement
 Z/Disc Menu	 Menu / Home
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 P-	 CH- / Page-
 Down	 Down
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Picture / Format
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat





Original	Replacement
	 Play / Slow
	 Sleep / Timer
	 Yellow / YouTube / Repeat
	 Pause / Step / Freeze
	 Blue / Prime Video / Random
	 Stop / Hold
	 Sound / Title

Original	Replacement

