




 




 




 








Original	Replacement
 Power	 Power
 Ambilight	 Zoom / Size
 Info	 Info / Angle
 Search	 D.Menu / Top
 Sources	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 ←	 Back / Return
 Home	 Shift + Menu /
 =	 Menu / Home
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold

Original	Replacement
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix /
 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Windows	 Smart / List
 Exit/Tv	 Exit / Cancel / Clear
 Vol-	 Vol-
 Rakuten Tv	 TV/Radio /
 CH-	 CH- / Page-
 1	 1
 2	 2





Original		Replacement	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	List/Tv Guide		Guide / EPG / -/--

Original		Replacement	

