 



 
 




 




 

 



 

 






 










Original	Replacement
 Record / OTR	 Rec / Rec Mode
 Standby	 Power
 Select	 Smart / List
 Timer	 Sleep / Timer
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Monitor	 Display / Media
 0	 0
 OK	 OK

Original	Replacement
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Play	 Play / Slow
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Index	 Info / Angle
 SP/LP	 D.Menu / Top
 Still	 Pause / Step / Freeze
 TV Vol+	 Shift + Vol+
 System	 Menu / Home
 TV CH+	 Shift + CH+ /
 TV Vol-	 Shift + Vol-
 TV Power	 Shift + Power
 TV CH-	 Shift + CH- /

