
























































 


 












 







 











Original		Replacement		Original		Replacement	
	Power		Power		(≡?)		Play / Slow
	Mute		Mute / Dimmer		Freeze		Pause / Step / Freeze
	1		1		Aspect		Shift + Picture / Format
	2		2		Audio		Audio / Lang I/II
	3		3		Sleep		Sleep / Timer
	4		4		Picture		Picture / Format
	5		5		Source		AV / Input / RDS
	6		6		(≡x)		Rec / Rec Mode
	7		7		Hold		Stop / Hold
	8		8		P+		CH+ / Page+
	9		9		Up		Up
	i		Info / Angle		Left		Left
	0		0		Vol-		Vol-
	R		Back / Return		Menu		Menu / Home
	(≡i)		>> / Tune+		Right		Right
	(◆)		l<< / Preset-		Vol+		Vol+
	(≡o)		<< / Tune-		P-		CH- / Page-





Original	Replacement	Original	Replacement
 Down	 Down		
 (≡)(-)	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 PIP Source	 Shift + 3		
 PIP Main	 Shift + 2		
 PIP Swap	 Shift + 5		
 PIP Position	 Shift + 4		
 PIP Size	 Shift + 6		
 PIP	 Shift + 1		

