



 

 


 










Original	Replacement	Original	Replacement
 Power	 Power	 Green / Audio	 Audio / Lang I/II
 1	 1	 Yellow / Subtitle	 Yellow / YouTube / Repeat
 2	 2	 Yellow / Subtitle	 Subtitle / EQ
 3	 3	 Menu	 Menu / Home
 TV/SAT	 Smart / List	 Blue / UHF	 Blue / Prime Video / Random
 4	 4	 Up	 Up
 5	 5	 White / Timer	 Sleep / Timer
 6	 6	 White / Timer	 Fav / Marker / PC
 Radio	 TV/Radio /	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Down	 Down
 0	 0	 V+	 Vol+
 Red / i	 Info / Angle	 P+	 CH+ / Page+
 Red / i	 Red / Netflix / Search	 V-	 Vol-
 Green / Audio	 Green / APP / Repeat	 ?	 D.Menu / Top



