
 

 













Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Ext Link		D.Menu / Top		-/--		Guide / EPG / -/--
	Tv Aspect/AV Link		Picture / Format		Vol-		Vol-
	Tv/Text		Text / Goto		Input Select		AV / Input / RDS
	1		1		I<< Index		I<< / Preset-
	2		2		Index >>I		>>I / Preset+
	3		3		ShowView		Info / Angle
	Tracking/V-Lock+ / CH+		CH+ / Page+		Prog Play		Smart / List
	4		4		Audio		Audio / Lang I/II
	5		5		Pause/Step		Pause / Step / Freeze
	6		6		Rec		Rec / Rec Mode
	Tracking/V-Lock- / CH-		CH- / Page-		Menu		Menu / Home
	7		7		Up		Up
	8		8		Play		Play / Slow
	9		9		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Left		Left
	AV		Shift + AV / Input / RDS		<<		<< / Tune-




























Original		Replacement	
	Enter		OK
	Right		Right
	>>		>> / Tune+
	Down		Down
	Stop		Stop / Hold
	Prog./Check CH		Shift + Up
	Date+		Shift + Right
	On+		Shift + Vol+
	Off+		Shift + CH+ /
	Prog./Check CH		Shift + Down
	Date-		Shift + Left
	On-		Shift + Vol-
	Off-		Shift + CH- /
	Prog.Check		TV/Radio /
	VPS/PDC		Zoom / Size
	SP/LP/EP		Setup / OPT /
	Timer		Sleep / Timer

Original		Replacement	
	I-Timer		Shift + Sleep / Timer
	Off Timer		Back / Return
	OSD/Display		Display / Media
	Reset / Cancel		Shift + Exit / Cancel / Clear





Original	Replacement
 Power	 Power
 Tv Aspect/AV Link	 Picture / Format
 Tv/Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 Tracking/V.Lock+ / CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Tracking/V.Lock- / CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 AV	 AV / Input / RDS
 0	 0

Original	Replacement
 Guide / EPG / -/--	 Guide / EPG / -/--
 Vol-	 Vol-
 Prog./Check CH	 Up
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Date+	 Right
 Yellow	 Yellow / YouTube / Repeat
 On+	 Shift + Vol+
 Blue	 Blue / Prime Video / Random
 Off+	 Shift + CH+ /
 Prog./Check CH	 Down
 Date-	 Left
 On-	 Shift + Vol-
 Off-	 Shift + CH- /

