


 




Original	Replacement	Original	Replacement
	Power		CH- / Page-
	Shift + Power		7
	Shift + Vol+		8
	Vol+		9
	Shift + CH+ /		Picture / Format
	Text / Goto		Shift + Exit / Cancel / Clear
	Shift + AV / Input / RDS		0
	Shift + Vol-		AV / Input / RDS
	Vol-		Info / Angle
	Shift + CH- /		I<< / Preset-
	1		>>I / Preset+
	2		<< / Tune-
	3		>> / Tune+
	CH+ / Page+		Stop / Hold
	4		Pause / Step / Freeze
	5		Play / Slow
	6		Sleep / Timer





Original	Replacement
 Prog / Check	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Direct Navigator	 Smart / List
 Left / <	 Left
 Up	 Up
 Right / >	 Right
 Function Menu	 Menu / Home
 OK	 OK
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red / Audio	 Audio / Lang I/II
 Red / Audio	 Red / Netflix / Search
 Green / Display	 Display / Media
 Green / Display	 Green / APP / Repeat
 Yellow / Create Chapter	 Yellow / YouTube / Repeat
 Blue/ Manual Skip	 Blue / Prime Video / Random

Original	Replacement
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Ext Link	 D.Menu / Top
 Direct Tv Rec	 Eject / Surround

