



| Original | Replacement |
|--|---|
|  Mute |  Mute / Dimmer |
|  TV/SAT |  AV / Input / RDS |
|  Standby |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Sat List |  Smart / List |
|  0 |  0 |
|  TV/R |  TV/Radio / |
|  CH-PG+ |  CH+ / Page+ |
|  EPG |  Guide / EPG / -/- |

| Original | Replacement |
|--|--|
|  Vol+ |  Vol+ |
|  CH/PG- |  CH- / Page- |
|  FAV |  Fav / Marker / PC |
|  Vol- |  Vol- |
|  Info |  Info / Angle |
|  Up |  Up |
|  Menu |  Menu / Home |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Red / Audio |  Red / Netflix / Search |
|  Red / Audio |  Audio / Lang I/II |
|  Green / Subt |  Green / APP / Repeat |
|  Green / Subt |  Subtitle / EQ |





Original

Replacement

| | | | |
|---|---------------|---|-----------------------------|
|  | Yellow / Text |  | Text / Goto |
|  | Yellow / Text |  | Yellow / YouTube / Repeat |
|  | Blue / Sleep |  | Blue / Prime Video / Random |
|  | Blue / Sleep |  | Sleep / Timer |
|  | Option 1 |  | D.Menu / Top |
|  | Option 2 |  | Setup / OPT / |
|  | Pal / NTSC |  | Picture / Format |
|  | Pause |  | Stop / Hold |
|  | Freeze |  | Pause / Step / Freeze |
|  | Zoom |  | Zoom / Size |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Original

Replacement

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

