 

 

 



 

 

 

 

 

 

 

 



 



 



 





 

 













 

 









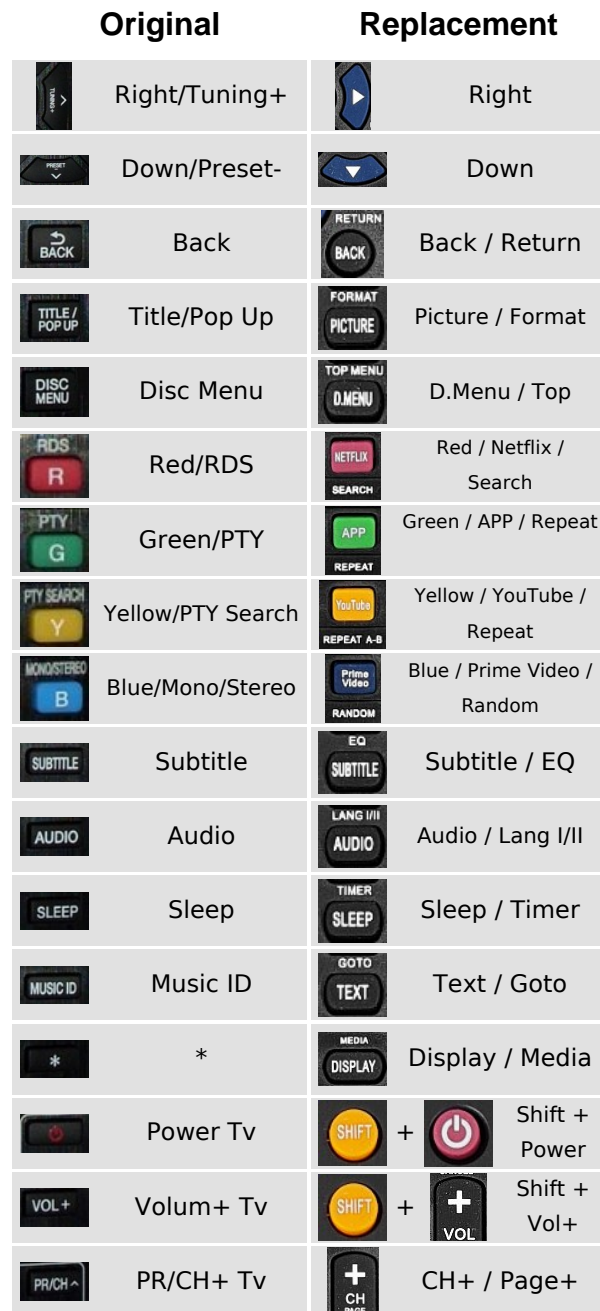 




Original	Replacement	Original	Replacement
	Power		Power
	Open/Close		Eject / Surround
	Function		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Speaker Level		TV/Radio /
	Vol+		Vol+
	Optical / Tv Sound		Setup / OPT /
	Sound Effect		Sound / Title
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	3D Sound		Zoom / Size
	Info/Menu		Info / Angle
	Up/Presets+		Up
	Left/Tuning-		Left
	Enter		OK





Power DIMMER MUTE SHIFT

TV DVD SAT AUX

SLOW STEP-FREEZE HOLD REC MODE

PLAY PAUSE STOP PRESET- PRESET+

TUNE- TUNE+ PRESET- PRESET+

LEFT RIGHT EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

CLEAR EXIT RETURN

CANCEL LIST BACK

+ VOL + CH PAGE

- -

TV DVD CD-STD

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX-HDD USB BLUETOOTH

7 8 9

PC

GUIDE FAV MARKER

EPG 0

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv