



| Original | Replacement |
|---|--|
|  Standby |  Power |
|  Tv Operate |  Shift + Power |
|  CH+ Tv |  Shift + CH+ / |
|  Vol+ Tv |  Vol+ |
|  Timer On/Off |  Sleep / Timer |
|  Input Select Tv |  Shift + AV / Input / RDS |
|  CH- Tv |  Shift + CH- / |
|  Vol- Tv |  Vol- |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Set |  Setup / OPT / |
|  SV/V+/Timer |  Picture / Format |
|  Left |  Left |
|  Right |  Right |
|  Down |  Down |
|  Clear |  Exit / Cancel / Clear |
|  <</REW |  << / Tune- |

| Original | Replacement |
|---|---|
|  Play/X2 |  Play / Slow |
|  >>/FF |  >> / Tune+ |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  Pause/Still |  Pause / Step / Freeze |
|  Tape Speed |  Zoom / Size |
|  Audio Out |  Audio / Lang I/II |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Mode OSD |  Text / Goto |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Display |  Display / Media |
|  7 |  7 |
|  8 |  8 |





| Original | Replacement | Original | Replacement |
|----------|--------------|----------|-----------------------------|
| | 9 | | 9 |
| | Channel+ | | CH+ / Page+ |
| | -/--/AM/PM | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | Input Select | | AV / Input / RDS |
| | Channel- | | CH- / Page- |
| | TV/VCR | | TV/Radio / |
| | Skip Search | | Smart / List |
| | Zero Back | | Back / Return |
| | I>/Slow | | Yellow / YouTube / Repeat |
| | DPSS- | | I<< / Preset- |
| | DPSS+ | | >>I / Preset+ |
| | Lock | | Blue / Prime Video / Random |

| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-------------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

