



Original	Replacement
	 Power
	 Shift + Power
	 Shift + Vol+
	 Shift + 2
	 Shift + AV / Input / RDS
	 Shift + Vol-
	 TV/Radio /
	 1
	 2
	 3
	 AV / Input / RDS
	 4
	 5
	 6
	 Fav / Marker / PC
	 7
	 8

Original	Replacement
	 9
	 Vol+
	 Exit / Cancel / Clear
	 0
	 Guide / EPG / +/-
	 Vol-
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 Play / Slow
	 D.Menu / Top
	 Up
	 Menu / Home
	 Left





Original	Replacement	Original	Replacement
	Enter		OK
	Right		Right
	Functions		Setup / OPT /
	Down		Down
	Return-Setup		Back / Return
	SW.Level		Sound / Title
	EQ		Subtitle / EQ
	C.Focus		Picture / Format
	S.SRD/PLII		Audio / Lang I/II
	FL Display/Sleep		Display / Media
	Test		Text / Goto
	Play Mode-CH Select		Smart / List
	Muting		Mute / Dimmer

