

 



 



 

 





Original		Replacement		Original		Replacement	
	Line 1		Power				
	Line2		Mute / Dimmer				
	Balanced		Play / Slow				
	Tape1		Pause / Step / Freeze				
	Tape 2		Stop / Hold				
	Phono		Rec / Rec Mode				
	Source Direct On/Off		<< / Tune-				

