









 


 
















































 









Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Volume+	 Vol+
 CD	 Shift + 3	 Disc / Direct Tuning	 Smart / List
 VCR	 Shift + 4	 0	 0
 Tuner / Band	 Display / Media	 ≥10 / -/--	 Guide / EPG / -/--
 Tuner / Band	 Shift + 6	 Volume-	 Vol-
 TV	 Shift + 1	 I<< Skip	 I<< / Preset-
 DVD Recorder	 Shift + 5	 Skip >> I	 >> I / Preset+
 DVD / Analog 6CH	 Shift + 2	 << Slow/Search	 << / Tune-
 1	 1	 Slow/Search >>	 >> / Tune+
 2	 2	 Stop	 Stop / Hold
 3	 3	 Pause	 Pause / Step / Freeze
 4	 4	 Play	 Play / Slow
 5	 5	 TOP MENU	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right



