



Original	Replacement
Standby	Power
Prog	TV/Radio /
Display	Display / Media
Open/Close	Eject / Surround
N/P	Smart / List
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Language	Audio / Lang I/II
7	7
8	8
9	9
Angle	Info / Angle

Original	Replacement
0	0
10+	Guide / EPG / -/-
Time	Sleep / Timer
Setup	Setup / OPT /
Up	Up
Repeat	Green / APP / Repeat
Left	Left
Enter	OK
Right	Right
Vol-	Vol-
Down	Down
Vol+	Vol+
Return	Back / Return
Zoom	Zoom / Size
Mode	Picture / Format
Step	Shift + Pause / Step /
L/R	Blue / Prime Video / Random





Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer		
 Resume	 Red / Netflix / Search		
 Slow	 Shift + Play /		
 Title	 Sound / Title		
 A-B	 Yellow / YouTube / Repeat		
 Menu	 Menu / Home		
 I<</Prev	 I<< / Preset-		
 >>I/Next	 >>I / Preset+		
 <</Rev	 << / Tune-		
 >>/Fwd	 >> / Tune+		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Play	 Play / Slow		

Original	Replacement	Original	Replacement

