


 














 







 









Original	Replacement
 Aper / Chiuso	 Eject / Surround
 Video / Y	 AV / Input / RDS
 Power	 Power
 OSD	 Display / Media
 PBC	 D.Menu / Top
 Titolo	 Sound / Title
 Menu	 Menu / Home
 Ricerca	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Repetizione	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B RPT	 Yellow / YouTube / Repeat
 7	 7

Original	Replacement
 8	 8
 9	 9
 Prog	 TV/Radio /
 Intro	 Smart / List
 0	 0
 10+	 Guide / EPG / -/-
 Pausa	 Pause / Step / Freeze
 Info / Play	 Play / Slow
 Info / Play	 Info / Angle
 Up	 Up
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Ritorno	 Back / Return
 Down	 Down
 Stop	 Stop / Hold
 <  Ralent	 CH- / Page-





	Original	Replacement		Original	Replacement
	Ralent I>	CH+ / Page+			
	<< F.REV	<< / Tune-			
	>> F.FWD	>> / Tune+			
	Step	Shift + Pause / Step /			
	Zoom	Zoom / Size			
	I<< Prec	I<< / Preset-			
	>>I Succ	>>I / Preset+			
	Sottotitoli	Subtitle / EQ			
	NTSC/PAL	Picture / Format			
	Volume-	Vol-			
	Volume+	Vol+			
	ANSOADONE	Sleep / Timer			
	Track	Text / Goto			
	Audio	Audio / Lang I/II			
	Muto	Mute / Dimmer			

