

 


 



 

 

 

 











 

 

 

 

 

 

 







 



 

 





 





 





 

 



 





 











Original	Replacement	Original	Replacement
 Standby	 Power	 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS	 DVD Menu	 D.Menu / Top
 Eject	 Eject / Surround	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Play	 Play / Slow
 4	 4	 Right	 Right
 5	 5	 Vol+	 Vol+
 6	 6	 Down	 Down
 7	 7	 PR+	 CH+ / Page+
 8	 8	 Vol-	 Vol-
 9	 9	 PR-	 CH- / Page-
 [■]/Wide	 Zoom / Size	 Red	 Red / Netflix / Search
 0	 0	 << / Tune-	 << / Tune-
 Recall	 Back / Return	 >>	 >> / Tune+
 Picture	 Picture / Format	 Green	 Green / APP / Repeat
 Setup	 Setup / OPT /	 Yellow	 Yellow / YouTube / Repeat

Original	Replacement	Original	Replacement
 Standby	 Power	 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS	 DVD Menu	 D.Menu / Top
 Eject	 Eject / Surround	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Play	 Play / Slow
 4	 4	 Right	 Right
 5	 5	 Vol+	 Vol+
 6	 6	 Down	 Down
 7	 7	 PR+	 CH+ / Page+
 8	 8	 Vol-	 Vol-
 9	 9	 PR-	 CH- / Page-
 [■]/Wide	 Zoom / Size	 Red	 Red / Netflix / Search
 0	 0	 << / Tune-	 << / Tune-
 Recall	 Back / Return	 >>	 >> / Tune+
 Picture	 Picture / Format	 Green	 Green / APP / Repeat
 Setup	 Setup / OPT /	 Yellow	 Yellow / YouTube / Repeat





Original	Replacement
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Blue	 Blue / Prime Video / Random
 [=]/Text/Title	 Text / Goto
 Pause/Mix	 Pause / Step / Freeze
 Stop	 Stop / Hold
 1/All/Repeat	 Shift + Green / APP / APP /
 Info	 Info / Angle
 O))/Audio	 Audio / Lang I/II
 [...]/Subtitle	 Subtitle / EQ
 Camera/Angle	 Shift + Info / Angle
 [=i]/Index	 Guide / EPG / -/--
 [=+]/Hold	 TV/Radio /
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 ♥/Favorite	 Fav / Marker / PC
 Reveal	 Smart / List

Original	Replacement
 Size	 Shift + Zoom /
 Subpage	 Display / Media

