 

 





 











 



 



 

 













 



 



 

 





 



 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 D.Setup/Index	 D.Menu / Top	 Up	 Up
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 Play/Hold	 Play / Slow	 Left	 Left
 Pause/Hold	 Pause / Step / Freeze	 Ok	 OK
 Stop/Mix	 Stop / Hold	 Right	 Right
 <</Cancel	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>/Size	 >> / Tune+	 Down	 Down
 I<</Reveal	 I<< / Preset-	 Vol+	 Vol+
 >>I/Subpage	 >>I / Preset+	 Eject/Auto	 Smart / List
 S.Mode	 Sound / Title	 Ch+	 CH+ / Page+
 Subtitle	 Subtitle / EQ	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 Ch-	 CH- / Page-
 Nicam/Audio	 Setup / OPT /	 1	 1
 D.Menu/Text	 Text / Goto	 2	 2
 Input	 AV / Input / RDS	 3	 3





Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
10+	→←/10+
0	0
TITLE FAV	Fav/Title
A-B	Red/A-B
PROG	Green/Prog
Yellow	Yellow/Repeat
GOTO	Blue/Goto
STEP	Step
ASPECT	Aspect
ANGLE	Angle

Original	Replacement
VIDEO 4	4
TAPE 5	5
TUNER 6	6
AUX - HDD 7	7
USB 8	8
BLUETOOTH 9	9
GUIDE EPG	Guide / EPG / -/--
HDMI - BAT 0	0
PC FAV MARKER	Fav / Marker / PC
NETFLIX SEARCH	Red / Netflix / Search
APP REPEAT	Green / APP / Repeat
YouTube REPEAT A-B	Yellow / YouTube / Repeat
Prime Video RANDOM	Blue / Prime Video / Random
SHIFT + STEP - FREEZE	Shift + Pause / Step /
SHIFT + FORMAT PICTURE	Shift + Picture / Format
SHIFT + ANGLE INFO	Shift + Info / Angle

