

 









Original	Replacement
	 Power
	 AV / Input / RDS
	 Shift + 1
	 Shift + Yellow / YouTube /
	 Shift + Blue / Prime
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + Red / Netflix /
	 Shift + 2
	 Shift + 3
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Blue / Prime Video / Random
	 D.Menu / Top
	 Up
	 Play / Slow
	 Pause / Step / Freeze
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Menu / Home
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-





	Original	Replacement		Original	Replacement
	Subtitle	Subtitle / EQ			
	Mute	Mute / Dimmer			
	Text	Text / Goto			
	1	1			
	2	2			
	3	3			
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	Guide	Guide / EPG / -/--			
	0	0			
	CH.List	Smart / List			

