





 




















 
 






 




Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Disney+	 Shift + 1
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Rakuten TV	 Shift + 4
 RMC Sport	 Shift + 5
 deezer	 Shift + 6
 Canal+	 Shift + 7
 SALTO	 Shift + 8
 molotov.TV	 Shift + 9
 Netflix	 Shift + Red / Netflix /
 VIDAA tv	 Shift + 0
 NBA League	 Shift + 2
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 [=]	 D.Menu / Top
 Up	 Up
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Menu / Home
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Micro	 Display / Media
 CH-	 CH- / Page-





Original		Replacement		Original		Replacement	
	Subtitle		Subtitle / EQ				
	Mute		Mute / Dimmer				
	Info		Info / Angle				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Guide		Guide / EPG / --				
	0		0				
	CH.List		Smart / List				

