

 






 

 









 
 

 



 









 





 

 







 







Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Subtitle / EQ
	 Fav / Marker / PC
	 Zoom / Size
	 TV/Radio /
	 D.Menu / Top
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Left
	 OK
	 Right

Original	Replacement
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8



