 






 












 










 






 

 

 

 



 


 
Original	Replacement
 Power	 Power
 Ambilight	 Smart / List
 prime video	 Shift + Blue / Prime
 YouTube	 Shift + Yellow / YouTube /
 Netflix	 Shift + Red / Netflix /
 :::	 D.Menu / Top
 Sources	 AV / Input / RDS
 Exit/TV	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 ←	 Back / Return
 Colors	 Display / Media
 Home	 Shift + Menu / Home

Home

Original	Replacement
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 +/Options/Info	 Info / Angle
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Tv Guide/List	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 1	 1





	Original	Replacement		Original	Replacement
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Text	 Text / Goto			
	0	 0			
	*	 Setup / OPT /			

