 


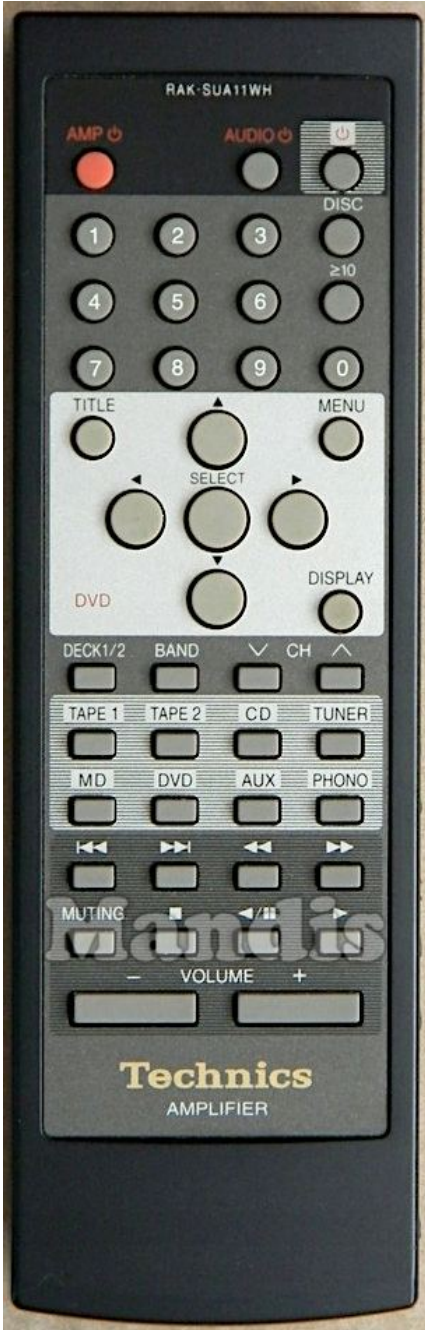

Original		Replacement		Original		Replacement	
	Power AMP		Power		Select		OK
	Power Audio	+	Shift + Power		Right		Right
	1	1	1		Down		Down
	2	2	2		Display		Display / Media
	3	3	3		Band		Smart / List
	Disc		Eject / Surround		CH-		CH- / Page-
	4	4	4		CH+		CH+ / Page+
	5	5	5		Tape 1	+ 5	Shift + 5
	6	6	6		Tape 2	+ 4	Shift + 4
	>=10		Guide / EPG / -/--		CD	+ 3	Shift + 3
	7	7	7		Tuner	+ 6	Shift + 6
	8	8	8		MD	+ 8	Shift + 8
	9	9	9		DVD	+ 2	Shift + 2
	0	0	0		Aux	+ 7	Shift + 7
	Up		Up		Phono	+ 1	Shift + 1
	Menu		Menu / Home		Muting		Mute / Dimmer
	Left		Left		Volume-		Vol-





Original


Replacement

Original	Replacement
 Volume+	 Vol+

Original

 Replacement




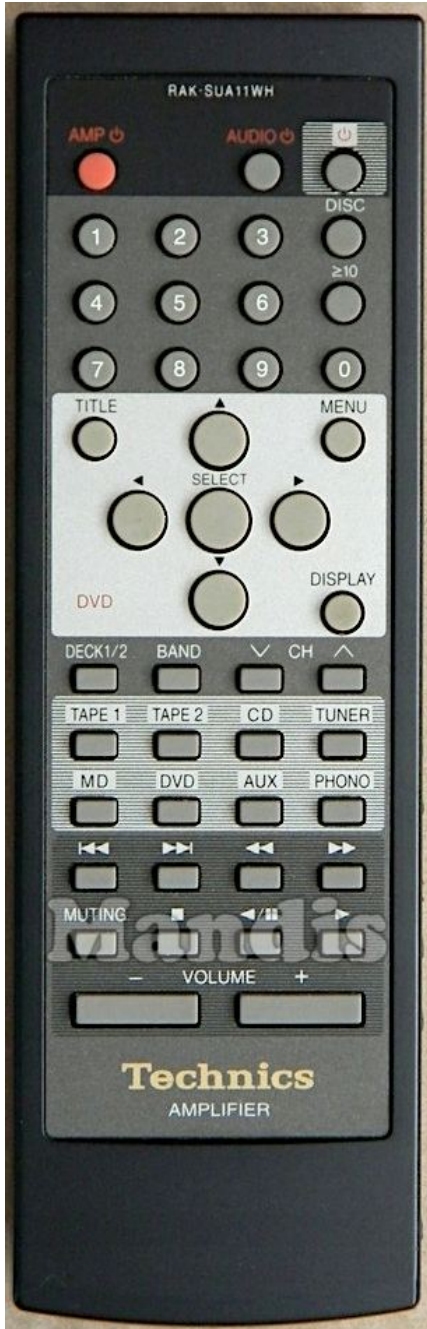

Original	Replacement
 Power DVD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >10	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Select	 OK

Original	Replacement
 Right	 Right
 Down	 Down
 Display	 Display / Media
 Band	 Smart / List
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Tape	 Shift + 5
 CD	 Shift + 3
 DVD	 Shift + 2
 I<</<<	 I<< / Preset-
 >>/>>I	 >>I / Preset+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+



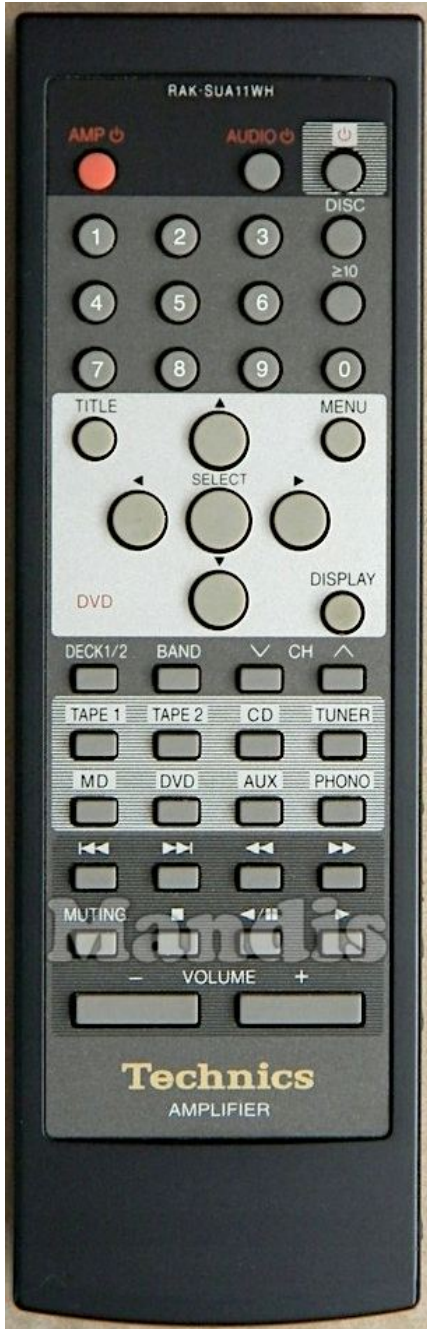 

Original	Replacement
 Power CD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >=10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 CD	 Shift + 3
 TUNER	 Shift + 6
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+

