







 

 


 


 
 












 


 
 
 
 
 




Original		Replacement		Original		Replacement	
	Standby/On		Power		7		7
	Eject		Eject / Surround		8		8
	Index		Info / Angle		9		9
	Rec Speed		Setup / OPT /		+		Vol+
	CLK/Count		D.Menu / Top		CH+		CH+ / Page+
	Picture		Picture / Format		100		Guide / EPG / -/-
	Timer		Sleep / Timer		0		0
	1		1		CLR/RST		Exit / Cancel / Clear
	2		2		-		Vol-
	3		3		CH-		CH- / Page-
	Strobe		Blue / Prime Video / Random		<<		<< / Tune-
	Audio		Audio / Lang I/II		Play		Play / Slow
	4		4		>>		>> / Tune+
	5		5		Rec		Rec / Rec Mode
	6		6		Stop		Stop / Hold
	Art		Text / Goto		Pause/Still		Pause / Step / Freeze
	Input		AV / Input / RDS		Display		Display / Media





Original	Replacement	Original	Replacement
 Monitor	 Yellow / YouTube / Repeat		
 A.Dub	 Sound / Title		
 Input System	 Red / Netflix / Search		
 Up	 Up		
 Output System	 Green / APP / Repeat		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Auto	 Smart / List		
 Down	 Down		
 Menu	 Menu / Home		
 ← Tracking	 I<< / Preset-		
 Tracking →	 >>I / Preset+		
 Slow-	 Shift + Down		
 Slow+	 Shift + Up		

