



Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
Sub-T	Subtitle / EQ	FAV	Fav / Marker / PC
Lang	Audio / Lang / I / II	Down / CH-	Down
Mute	Mute / Dimmer	Tv / Radio	TV / Radio /
EPG	Guide / EPG / - / -	1	1
Goto	Shift + Text /	2	2
Page+	CH+ / Page+	3	3
TTX	Text / Goto	Recall	Back / Return
Repeat	Shift + Green / APP /	4	4
Page-	CH- / Page-	5	5
Menu	Menu / Home	6	6
Up / CH+	Up	Info	Info / Angle
Exit	Exit / Cancel / Clear	7	7
Vol-	Vol-	8	8
Left	Left	9	9
OK	OK	0	0
Right	Right	<< / Tune-	<< / Tune-



