 
 
 




Original	Replacement	Original	Replacement
 Power CD	 Power	 Setup AMP	 Shift + Setup / OPT / Tools
 Power AMP	 Shift + Power	 Pause	 Pause / Step / Freeze
 Up CD	 Up	 I<<	 I<< / Preset-
 Up AMP	 Shift + Up	 Play	 Play / Slow
 Left CD	 Left	 >>I	 >>I / Preset+
 Left AMP	 Shift + Left	 Stop	 Stop / Hold
 Enter CD	 OK	 Info	 Info / Angle
 Enter AMP	 Shift + OK	 Disc/Input	 AV / Input / RDS
 Right CD	 Right	 Open/Close	 Eject / Surround
 Right AMP	 Shift + Right	 Input Up	 CH+ / Page+
 Down CD	 Down	 Tone	 Display / Media
 Down AMP	 Shift + Down	 Volume Up	 Vol+
 Display CD	 Smart / List	 Input Down	 CH- / Page-
 Display AMP	 Shift + Smart / List	 Volume Down	 Vol-
 Mode/Trim CD	 Picture / Format	 Mute	 Mute / Dimmer
 Mode/Trim AMP	 Shift + Picture / Format	 1	 1
 Setup CD	 Setup / OPT / Tools	 2	 2





Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Program		Shift + TV/Radio / Program
	Filter		Red / Netflix / Search
	Sound Mode		Sound / Title
	Digital Out		TV/Radio /

