




 

 



 











 

 

 

 



 

 


 


 
 










 

 
 
 
 

 
 

 








Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Menu		Menu
	Picture		Format
	Sound		Dual
	PRG +		Ch +
	PRG -		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	CTRL		Media
	Mute		Mute
	Exit		Exit
	Size / Audio		Shift + Dual
	Still / Subt		Subt
	PIP / REP		Options
	Focus / A-B		Eject
	Normal / Title		Ok





Original	Replacement
 CVBS1	 Shift + 1
 CVBS2	 Shift + 2
 CVBS3	 Shift + 3
 Y Pb Pr	 Shift + 4
 YC1	 Shift + 5
 YC2	 Shift + 6
 PC	 Pre Ch
 DVI / HDMI	 Smart
 [≡?] / MTS	 List
 [≡ ] / Sleep	 Sleep
 [≡i] / Time	 3D
 [≡ ] / PREPG	 Guide
 Red / Delete	 Red
 Green / Skip	 Green
 Yellow / Insert	 Yellow
 Blue / Replace	 Blue

Original	Replacement

