 



 
 


 







 







 
 

 








 

 


 














 




 

 








	Original	Replacement		Original	Replacement
	 Power	 Power		 -/--	 Shift + Guide
	 Mute	 Mute		 Recall	 Back
	 Auto	 Smart		 Tv Menu	 Menu
	 P.Mode	 Shift + Format		 Exit	 Exit
	 S.Mode	 Shift + Dual		 Guide	 Guide
	 Display	 Shift + Info		 Source	 AV
	 Audio / Nicam	 Dual		 Up	 Up
	 1	 1		 Down	 Down
	 2	 2		 Right	 Right
	 3	 3		 Left	 Left
	 4	 4		 Enter	 Ok
	 5	 5		 CH-	 Ch -
	 6	 6		 CH+	 Ch +
	 7	 7		 Vol-	 Vol -
	 8	 8		 Vol+	 Vol +
	 9	 9		 Text	 Text
	 0	 0		 <<	 <<





Original	Replacement	Original	Replacement
>>	>>	Repeat	Shift + Text
Hold	Options	FAV +	Shift + Up
Index	Info	Subtitle	Subt
I<<	I<<	Media	Media
Size	Format	Rec	Rec
>>I	>>I		
Play/Pause	Play		
Stop / Subpage	Stop		
Zoom / Reveal	Eject		
Sleep	Sleep		
Tv / Radio	TV/R		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
FAV	Pre Ch		
FAV -	Shift + Down		

