









 
Original	Replacement
	Power
	SD/USB- PVR
	Time
	Mute
	Vol+
	Source
	Ch+
	Vol-
	Mode
	Ch-
	Tv/Radio
	Eject
	Audio
	Play
	Pause
	L/R
	Stop

Original	Replacement
	Subtitle / PC Auto
	Menu
	Up
	Exit
	<<
	Left
	Ok
	Right
	Fav
	>>
	Down
	>>
	Epg
	I<<
	TTX/MIX
	Info/Display
	Red/Dvd Menu





Original	Replacement
 Red/Dvd Menu	 D.Menu / Top
 Green/Lang	 Green / APP / Repeat
 Green/Lang	 Shift + Audio / Lang I/II
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Yellow/Repeat	 Shift + Green / APP / Repeat
 Blue/Dvd Setup	 Blue / Prime Video / Random
 Blue/Dvd Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--

Original	Replacement
 0	 0
 Return	 Back / Return

