


 
 











 



 









 







Original	Replacement
 POWER	 Power
 MUTE	 Mute
 P.MODE	 +  Shift + Format
 S.MODE	 Dual
 SLEEP	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 EXIT	 Exit

Original	Replacement
 INPUT	 AV
 MENU	 Menu
 RECALL	 Pre Ch
 <	 Left
 >	 Right
 ^	 Up
 v	 Down
 ENTER	 Ok
 VOL+	 Vol +
 VOL-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 RED/DVD	 Red
 GREEN/DVD	 Green
 YELLOW/TITLE	 Yellow
 BLUE/LANG	 Blue
 DISPLAY	 Info





The image shows a black universal remote control. At the top, there is a red power button on the left, a 'MUTE' button in the center, and an orange 'SHIFT' button on the right. Below these are four blue buttons labeled 'TV', 'DVD', 'SAT', and 'AUX'. The next row contains 'PLAY MODE' (with a play icon), a pause icon, a stop icon, and 'REC MODE' (with a red dot icon). The following row has four arrow buttons: left double arrow, left single arrow, right single arrow, and right double arrow. Below these are 'DISC NAV', 'SOUND', 'AD', and 'SETTINGS'. The next row contains 'LIST', 'DUAL', 'SUBT', and 'OPT'. The following row has 'PROG', 'SEARCH', 'PICTURE', and 'ECO'. The next row contains 'SLEEP', 'TV/R', 'FORMAT', and '3D'. Below these are 'E-MANUAL', 'REPEAT', 'ZOOM', and 'TIMER'. The final row in this section contains 'D.MENU', 'TEXT', a triangle-up icon, and 'AV'. Below this is a 'TOP MENU' button (with a 'MENU' label) and a 'DISPLAY' button (with an 'INFO' label). In the center is a blue directional pad with an 'OK' button in the middle. To the left of the pad are 'CLEAR' and 'EXIT' buttons. To the right are 'RETURN' and 'BACK' buttons. Below the pad are 'HOME', 'SMART', 'APP', and 'MEDIA' buttons. To the left of these are '+' and '-' buttons labeled 'VOL'. To the right are '+' and '-' buttons labeled 'CH'. Below these are buttons for numbers 1 through 9, a 'GUIDE' button, a '0' button, and a 'PRE-CH' button. At the bottom are four colored buttons: red 'A', green 'B', orange 'C', and blue 'D'. At the very bottom, there is a logo for 'Mandis shop' with a website address 'www.mandis.tv'.