



























 
















 

 




Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 PIP	 Setup / OPT /
 Timer	 Sleep / Timer
 Format	 Picture / Format
 Disp	 Display / Media
 EPG	 Guide / EPG / -/--

Original	Replacement
 $\Delta\downarrow$	 Smart / List
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Left / V-	 Left
 Left / V-	 Vol-
 OK	 OK
 Right / V+	 Vol+
 Right / V+	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 Input	 AV / Input / RDS
 Text	 Text / Goto
 Red / Picture	 Shift + Picture / Format
 Red / Picture	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow		Yellow / YouTube / Repeat
	Blue / Sound		Sound / Title
	Blue / Sound		Blue / Prime Video / Random
	<< / -/00		<< / Tune-
	Play/Pause / Text Reveal		Play / Slow
	Play/Pause / Text Reveal		Pause / Step / Freeze
	>> / +/00		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Rec / Text Cancel		Rec / Rec Mode

