



| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-----------------------------|
| | Power | | Power |
| | Dtv/Vcr | | Display / Media |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Menu | | Menu / Home |
| | 0 | | 0 |
| | Exit | | Exit / Cancel / Clear |
| | Red | | Red / Netflix / Search |
| | << | | << / Tune- |
| | Up | | Up |
| | Ch+ | | CH+ / Page+ |
| | Green | | Green / APP / Repeat |
| | >> | | >> / Tune+ |
| | Left | | Left |
| | Vol- | | Vol- |
| | Ok | | OK |
| | Right | | Right |
| | Vol+ | | Vol+ |
| | Yellow | | Yellow / YouTube / Repeat |
| | Down | | Down |
| | Ch- | | CH- / Page- |
| | Blue | | Blue / Prime Video / Random |
| | Mute | | Mute / Dimmer |
| | Pause | | Pause / Step / Freeze |
| | Favorite | | Fav / Marker / PC |
| | Recall | | Back / Return |
| | Lang | | Shift + Audio / Lang I/II |



