 


 
 














 



 








 
 


 
 



 



 
 
 

 

 
 


 
 
 

 






 






 

 


Original	Replacement	Original	Replacement
	Power		Power
	Tv/AV		SRC
	?		VOD
	Mute		MUTE
	0		0
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		-/-- / EPG
	Lock		P/C / FAV
	Zoom		WIDE
	Hold		Subt.
	→ P ←		V-FOR
	Mix		MEDIA
	Text		TEXT
	Subcode		OPT+
	QV		TV/R
	→ SI ←		Audio
	Cancel		EXIT
	Reveal		BACK
	Yellow/Timer		Yellow (C)
	Blue/Sound		Blue (D)
	Red/Picture		Red (A)
	Green/Clock		Green (B)
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT





Original		Replacement		Original		Replacement	
	OK		OK				
	P+		CH +				
	P-		CH -				
	Vol+		VOL +				
	Vol-		VOL -				
	M		MENU				

