





































 



 
 


















 












 



 






 



 





Original	Replacement	Original	Replacement
 Power	 Power	 Back	 Back / Return
 Auto	 Smart / List	 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer	 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format	 Source	 AV / Input / RDS
 S.Mode	 Sound / Title	 Up	 Up
 I/II/Audio	 Audio / Lang I/II	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Red/Eject	 Eject / Surround
 5	 5	 Red/Eject	 Red / Netflix / Search
 6	 6	 Green/D.Menu	 D.Menu / Top
 7	 7	 Green/D.Menu	 Green / APP / Repeat
 8	 8	 Yellow/Setup	 Yellow / YouTube / Repeat
 9	 9	 Yellow/Setup	 Setup / OPT /
 -/--	 Shift + Guide / EPG / -/--	 Blue/D.Disp	 Blue / Prime Video / Random
 0	 0	 Display	 Display / Media



Original	Replacement	Original	Replacement
 Power	 Power	 Back	 Back / Return
 Auto	 Smart / List	 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer	 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format	 Source	 AV / Input / RDS
 S.Mode	 Sound / Title	 Up	 Up
 I/II/Audio	 Audio / Lang I/II	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Red/Eject	 Eject / Surround
 5	 5	 Red/Eject	 Red / Netflix / Search
 6	 6	 Green/D.Menu	 D.Menu / Top
 7	 7	 Green/D.Menu	 Green / APP / Repeat
 8	 8	 Yellow/Setup	 Yellow / YouTube / Repeat
 9	 9	 Yellow/Setup	 Setup / OPT /
 -/--	 Shift + Guide / EPG / -/--	 Blue/D.Disp	 Blue / Prime Video / Random
 0	 0	 Display	 Display / Media





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 Media	 Shift + Display / Media
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Rec	 Rec / Rec Mode
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Tv/Radio	 TV/Radio /
 Play	 Play / Slow
 Text	 Text / Goto
 Stop/Index	 Stop / Hold
 A-B	 Shift + Yellow / YouTube /
 <</Hold	 Shift + Stop /

Hold

Original	Replacement
 <</Hold	 << / Tune-
 >>/Subpage	 >> / Tune+
 Repeat/Repeat	 Shift + Green / APP /
 I<</Size	 Zoom / Size
 I<</Size	 I<< / Preset-
 >>I/Cancel	 Shift + Exit / Cancel / Clear
 >>I/Cancel	 >>I / Preset+

