 



 
 












 







 













Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer	 Jump	 Display / Media
 Source	 AV / Input / RDS	 FAV.CH	 Fav / Marker / PC
 I/II/Audio	 Audio / Lang I/II	 OK	 OK
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 Right	 Right
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 PR-	 CH- / Page-
 8	 8	 PR+	 CH+ / Page+
 9	 9	 Red/D.Setup	 Red / Netflix / Search
 0	 0	 Green/Repeat	 Green / APP / Repeat
 Menu	 Menu / Home	 Yellow/Zoom	 Yellow / YouTube / Repeat
 Info	 Info / Angle	 Blue/Goto	 Blue / Prime Video / Random
 Exit	 Exit / Cancel / Clear	 [=+]/DTV/Radio	 TV/Radio /



