



| Original   | Replacement  |
|--|--|
|  Power                        |  Power                        |
|  Mute                         |  Mute / Dimmer                |
|  Nicam/A2                     |  Shift + Audio / Lang I/II    |
|  Aspect                       |  Shift + Picture / Format     |
|  P.Mode                       |  Picture / Format             |
|  S.Mode                       |  Sound / Title                |
|  1                            |  1                            |
|  2                            |  2                            |
|  3                            |  3                            |
|  4                            |  4                            |
|  5                           |  5                           |
|  6                          |  6                          |
|  7                          |  7                          |
|  8                          |  8                          |
|  9                          |  9                          |
|  Shift + Guide / EPG / -/-- |  Shift + Guide / EPG / -/-- |
|  0                          |  0                          |

| Original   | Replacement   |
|--|---|
|  Recall   |  Back / Return               |
|  Display  |  Display / Media             |
|  Freeze   |  Pause / Step / Freeze       |
|  Rec/Auto |  Rec / Rec Mode              |
|  Red      |  Red / Netflix / Search      |
|  Green    |  Green / APP / Repeat        |
|  Yellow   |  Yellow / YouTube / Repeat   |
|  Blue     |  Blue / Prime Video / Random |
|  Sleep    |  Sleep / Timer               |
|  Up       |  Up                          |
|  Source  |  AV / Input / RDS           |
|  Left   |  Left                      |
|  Enter  |  OK                        |
|  Right  |  Right                     |
|  Down   |  Down                      |
|  Menu   |  Menu / Home               |
|  Exit   |  Exit / Cancel / Clear     |



