




 








Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Vol+	 Vol+
 I/II/Audio	 Audio / Lang I/II
 Auto	 Smart / List

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
	 Up
	 Left
 OK/Enter	 OK
	 Right
 Menu	 Menu / Home
	 Down
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Play/Pause / Size	 Zoom / Size
 Play/Pause / Size	 Play / Slow





Original	Replacement
 Play/Pause / Size	 Pause / Step / Freeze
 Stop/Hold	 Stop / Hold
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 <</Index	 << / Tune-
 >>/Reveal	 >> / Tune+
  <</Subpage	  << / Preset-
 >> /FAV	 >>  / Preset+
 >> /FAV	 Fav / Marker / PC
 Media	 +  Shift + Display / Media
 Rec	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

