











 

















 


 




























 




 
 
 











Original	Replacement	Original	Replacement
 Standby	 Power	 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Auto	 Smart / List
 Audio I/II	 Audio / Lang I/II	 Display	 Display / Media
 Sleep	 Sleep / Timer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 CH-	 CH- / Page-
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat









 

 











 









 





Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Stop /
	 Shift + Green / APP /
	 Subtitle / EQ
	 Info / Angle
	 Zoom / Size
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 D.Menu / Top

Original	Replacement
	 Guide / EPG / -/--
	 TV/Radio /





Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio I/II	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





	Original	Replacement	Original	Replacement
		Text		Text / Goto
		Subtitle		Subtitle / EQ
		Index		Info / Angle
		Size		Zoom / Size
		<<		<< / Tune-
		>>		>> / Tune+
		Play/Pause		Play / Slow
		Play/Pause		Pause / Step / Freeze
		Stop		Stop / Hold
		I<<		I<< / Preset-
		>>I		>>I / Preset+
		Rec		Rec / Rec Mode
		Timeshift		Smart / List
		EPG		Guide / EPG / -/--
		Tv/Radio		TV/Radio /

